

HER 筒夾刀把 HER COLLET CHUCK



Balancing / 動平衡		Dimensions / 尺寸標示	
G6.3 SK40 Max.25,000 RPM Or U ≤ 1gmm	G6.3 SK50 Max.20,000 RPM Or U ≤ 1gmm		
Option / 選配 G2.5 SK40 Max.25,000 RPM Or U ≤ 1gmm	Option / 選配 G2.5 SK50 Max.20,000 RPM Or U ≤ 1gmm		

Order No. 訂購編號	Range 夾持範圍	ød	ød1	L	L1	Tool Clamping Depth L2 刀具夾持深度	page.146		page.144		page.120		page.149	
							Nut 螺帽	Screw 調整螺絲	Collet 筒夾	Wrench 扳手				
SK40	HER16-070	1.0~10.0	30	70	51	29~58	CAP-HER16	ER-M11	ER16-HP	PHS-20-R0300				
	HER16-100	1.0~10.0	30	100	81	29~58	CAP-HER16	ER-M11	ER16-HP	PHS-20-R0300				
	HER20-070	1.0~13.0	32	70	51	32~68	CAP-HER20	ER-M14	ER20-HP	PHS-20-R0320				
	HER20-100	1.0~13.0	32	100	81	32~68	CAP-HER20	ER-M14	ER20-HP	PHS-20-R0320				
	HER25-070	1.0~16.0	40	70	51	35~73	CAP-HER25	ER-M18	ER25-HP	PHS-20-R0400				
	HER25-100	1.0~16.0	40	100	81	35~73	CAP-HER25	ER-M18	ER25-HP	PHS-20-R0400				
	HER32-070	2.0~20.0	50	70	51	41~78	CAP-HER32	ER-M22	ER32-HP	PHS-20-R0500				
SK50	HER32-100	2.0~20.0	50	100	81	41~78	CAP-HER32	ER-M22	ER32-HP	PHS-20-R0500				
	HER16-100	1.0~10.0	30	100	81	29~58	CAP-HER16	ER-M11	ER16-HP	PHS-20-R0300				
	HER16-160	1.0~10.0	30	160	141	29~58	CAP-HER16	ER-M11	ER16-HP	PHS-20-R0300				
	HER20-100	1.0~13.0	32	100	81	32~68	CAP-HER20	ER-M14	ER20-HP	PHS-20-R0320				
	HER20-160	1.0~13.0	32	160	141	32~68	CAP-HER20	ER-M14	ER20-HP	PHS-20-R0320				
	HER25-100	1.0~16.0	40	100	81	35~73	CAP-HER25	ER-M18	ER25-HP	PHS-20-R0400				
	HER25-160	1.0~16.0	40	160	141	35~73	CAP-HER25	ER-M18	ER25-HP	PHS-20-R0400				
HER32-100	2.0~20.0	50	100	81	41~78	CAP-HER32	ER-M22	ER32-HP	PHS-20-R0500					
HER32-160	2.0~20.0	50	160	141	41~78	CAP-HER32	ER-M22	ER32-HP	PHS-20-R0500					

Remarks / 備註

- 需配合 3μ HP 筒夾 With 3μ HP Grade Collet
- 若需出水型刀把，請參考 page.26 選用說明
- 筒夾夾持為一對一整數值

Applications / 應用

