

THER 小徑刀把

THER SLIM COLLET CHUCK



Balancing / 動平衡

Dimensions / 尺寸標示

G6.3

BT30 / BT40
Max.25,000 RPM
Or U ≤ 1gmm

G6.3


BT50
Max.20,000 RPM
Or U ≤ 1gmm

Option / 選配
G2.5

BT30 / BT40
Max.25,000 RPM
Or U ≤ 1gmm

Option / 選配
G2.5

BT50
Max.20,000 RPM
Or U ≤ 1gmm

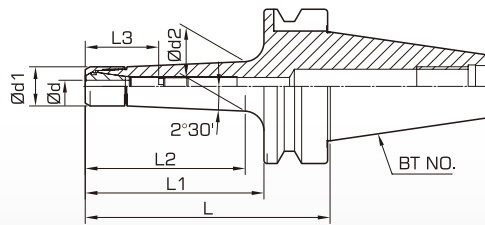

page.146

page.144

page.120

page.149

Tool
Clamping
Depth L3
刀具夾持
深度



Nut
螺帽



Screw
調整螺絲



Collet
筒夾



Wrench
扳手

Order No. 訂購編號		Range 夾持範圍	ød	ød1	ød2	L	L1	L2	Tool Clamping Depth L3 刀具夾持 深度	Nut 螺帽	Screw 調整螺絲	Collet 筒夾	Wrench 扳手
BT30 (BTT30)	THER11-100	1.0~7.0	16	20.9	100	78	73.2	19~48	CAP-THER11	ER-M8	ER11-HP	PHS-20-RO160	
	THER16-100	1.0~10.0	22	26.5	100	78	73.2	29~58	CAP-THER16	ER-M11	ER16-HP	PHS-20-RO220	
BT40 (BTT40)	THER11-100	1.0~7.0	16	20.2	100	73	65.3	19~48	CAP-THER11	ER-M8	ER11-HP	PHS-20-RO160	
	THER11-130	1.0~7.0	16	22.8	130	103	95.3	19~48	CAP-THER11	ER-M8	ER11-HP	PHS-20-RO160	
	THER11-160	1.0~7.0	16	25.5	160	133	125.3	19~48	CAP-THER11	ER-M8	ER11-HP	PHS-20-RO160	
	THER16-100	1.0~10.0	22	26.1	100	73	68.2	29~58	CAP-THER16	ER-M11	ER16-HP	PHS-20-RO220	
	THER16-130	1.0~10.0	22	28.7	130	103	98.2	29~58	CAP-THER16	ER-M11	ER16-HP	PHS-20-RO220	
	THER16-160	1.0~10.0	22	31.3	160	133	128.2	29~58	CAP-THER16	ER-M11	ER16-HP	PHS-20-RO220	
BT50 (BTT50)	THER11-100	1.0~7.0	16	18.7	100	62	47.7	19~48	CAP-THER11	ER-M8	ER11-HP	PHS-20-RO160	
	THER11-130	1.0~7.0	16	21.3	130	92	77.7	19~48	CAP-THER11	ER-M8	ER11-HP	PHS-20-RO160	
	THER11-160	1.0~7.0	16	23.9	160	122	107.7	19~48	CAP-THER11	ER-M8	ER11-HP	PHS-20-RO160	
	THER16-100	1.0~10.0	22	24.3	100	62	47.7	29~58	CAP-THER16	ER-M11	ER16-HP	PHS-20-RO220	
	THER16-130	1.0~10.0	22	26.9	130	92	77.7	29~58	CAP-THER16	ER-M11	ER16-HP	PHS-20-RO220	
	THER16-160	1.0~10.0	22	29.5	160	122	107.7	29~58	CAP-THER16	ER-M11	ER16-HP	PHS-20-RO220	

Remarks / 備註

- 需配合 3μ HP 筒夾 With 3μ HP Grade Collet
- 若需出水型刀把，請參考 page.26 選用說明
- 筒夾夾持為一對一整數值

Applications / 應用



Drilling
鑽孔



Reaming
銜孔



Tapping
攻牙



Mini Diameter
小徑加工